Adding APN to your Samsung Phone

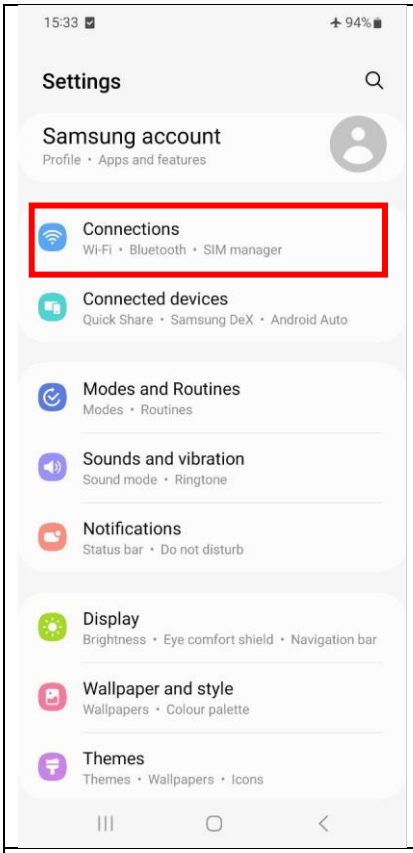	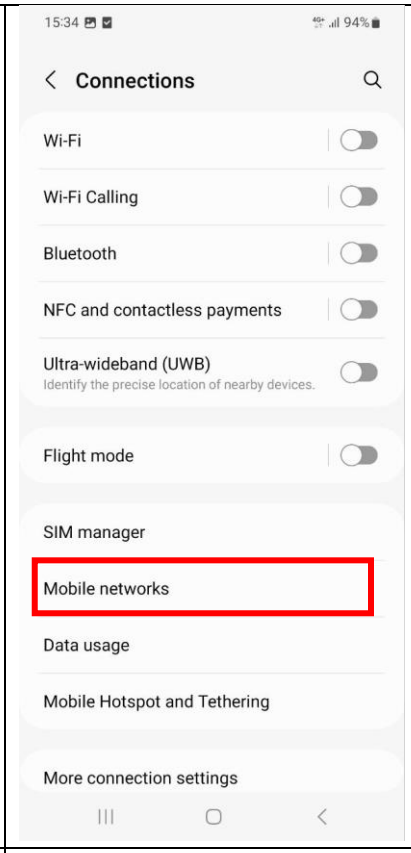	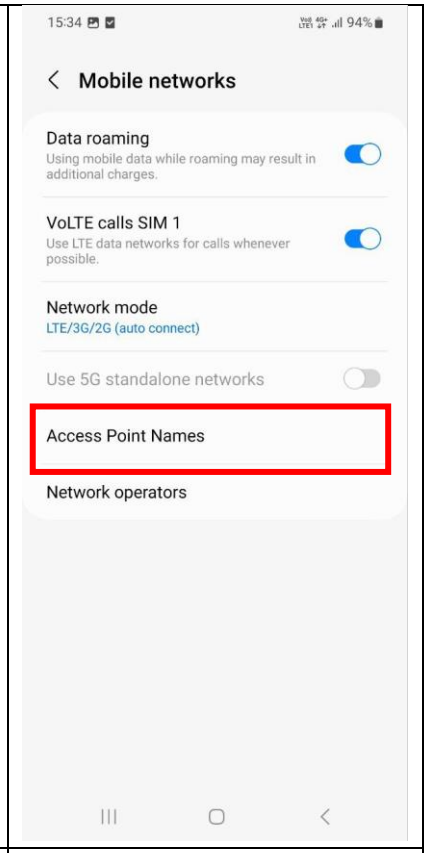
1.In the Settings page, tap on Connections	2. In the Connections page, tap on Mobile Networks	3. After tapping into the Mobile Networks page, tap on “Access Point Names”

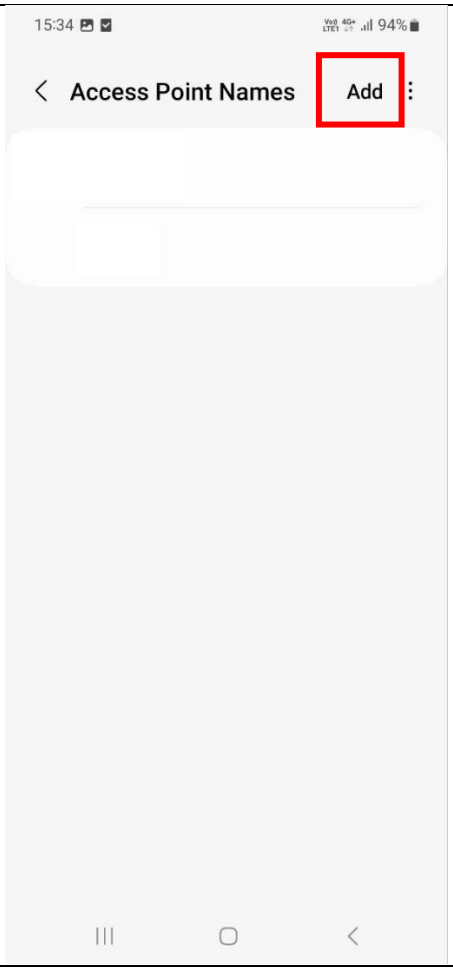	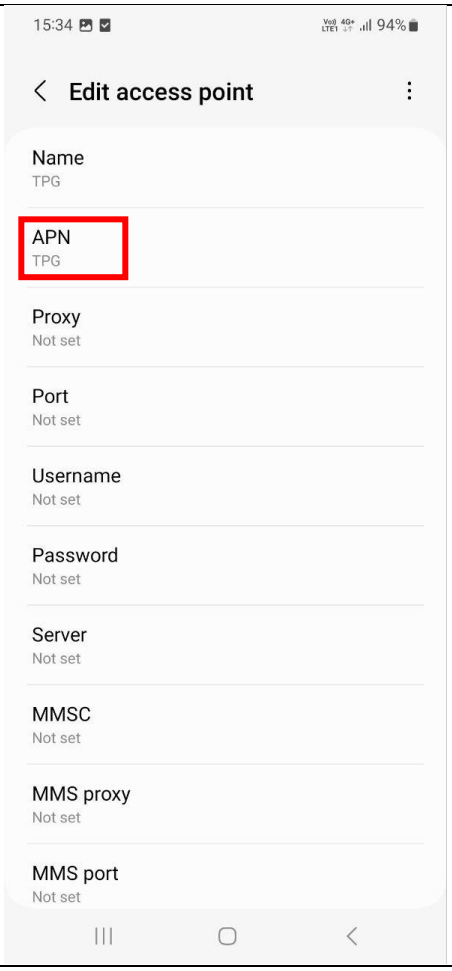
4. Under the Access Point Names click on Add	5. Under APN, type in TPG and save (Can leave everything else blank)